



**99-009 Rev B
2 May, 2007**

INSTALLING OZONE FILTER ON M200A/M201A/M200AH ANALYZERS

I. SCOPE:

To help you install the ozone filter on the M200A/M201A/M200AH API NO_x Analyzers.

II. PARTS:

KIT000081

III. TOOLS:

7/16" open end wrench

1/2" open end wrench

IV. PROCEDURE:

1. Remove power to the analyzer and pump pack.
2. Remove the cover from the analyzer.
3. Remove the fitting on top of the reaction cell that goes from the ozone generator to the reaction cell.
4. Connect the 1/8" tube that comes from the ozone generator to the bottom of the ozone filter.
5. Connect the 1/8" SS tube that is in the kit to the fitting on top of the reaction cell that the ozone goes into.
6. Leak check the unit.
7. Put the cover back onto the unit and start the unit back up.
8. Do your regular calibration of the analyzer.


If you have questions regarding this procedure or any API equipment, please contact an API Customer Service representative:

Phone: (619) 657-9800

Email: customerservice@advpol.com

Fax: (619) 657-9816

WWW: <http://www.advpol.com>

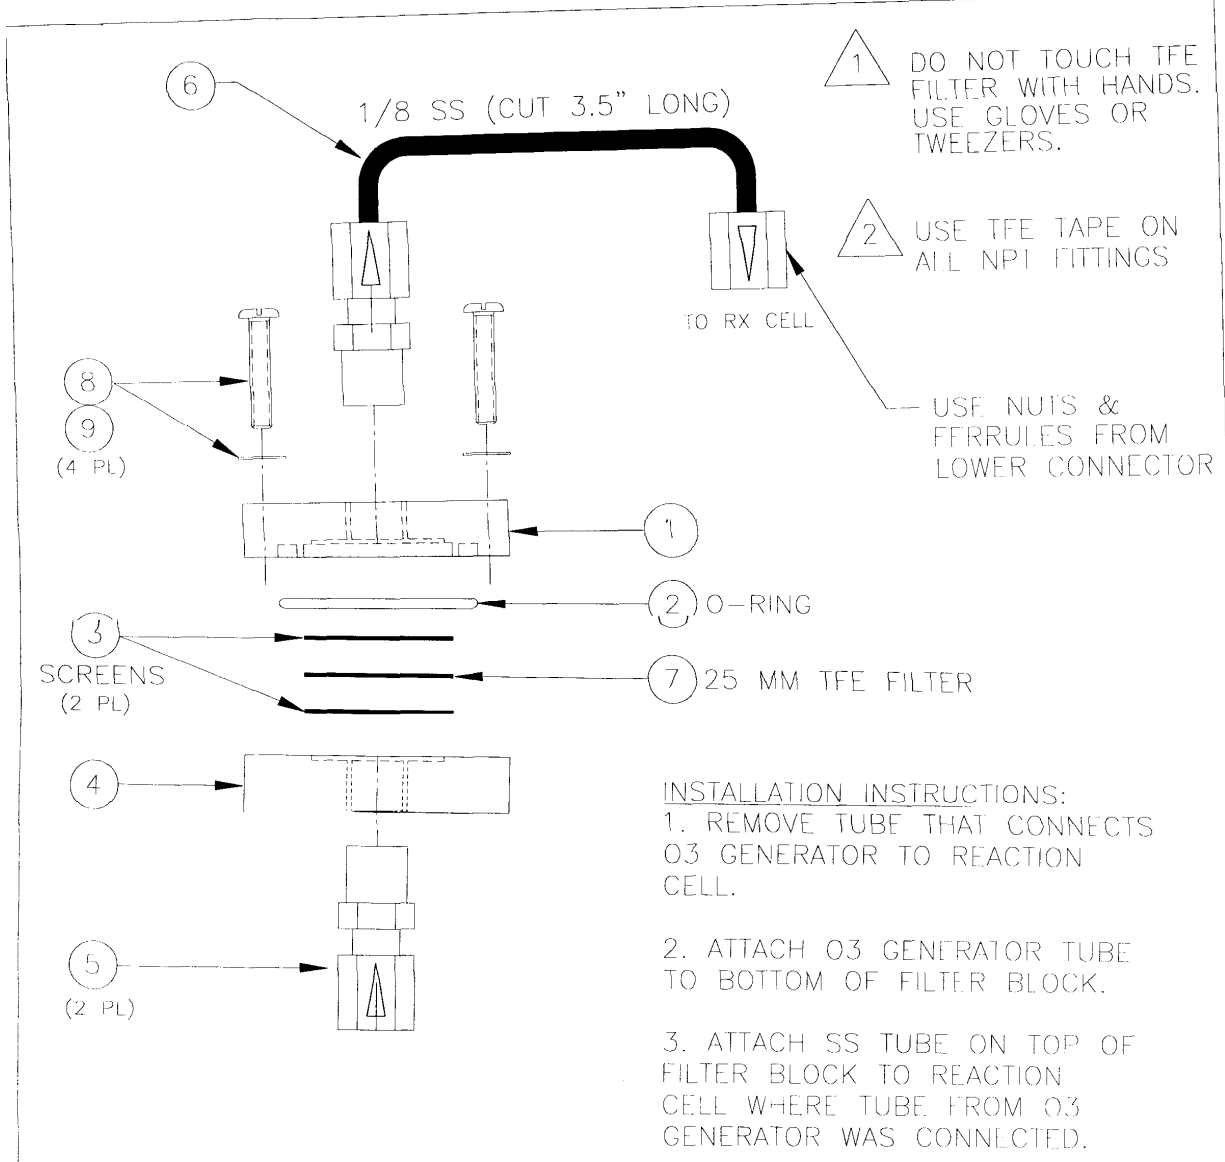

9/28/98		A: INITIAL RELEASE	RH
DATE	ECR#	DESCRIPTION OF CHANGE	BY

TOLERANCES

X± XXX±

XX±

The information hereon is the property of API and is submitted in strictest confidence for reference only. Unauthorized use by anyone for any other purposes is prohibited. This document or any information contained in it may not be duplicated without proper authorization.

API ADVANCED POLLUTION INSTRUMENTATION, INC. SAN DIEGO, CA.			
APPROVALS	DATE	25mm OZONE PARTICULATE FILTER	
DRAWN			
CHECKED			
APPROVED			
DO NOT SCALE DRAWING		SIZE	DRAWING NO. 02899
		SCALE	REVISION A
		SHEET 1 of 1	

INSTALLING OZONE FILTER ON M200A/M201A/M200AH ANALYZERS

Service Note-99-009

Page 3 of 3